


SICOTAS

CSEWA10001OA
CS001A1XLT
CS001A1XBKY1142

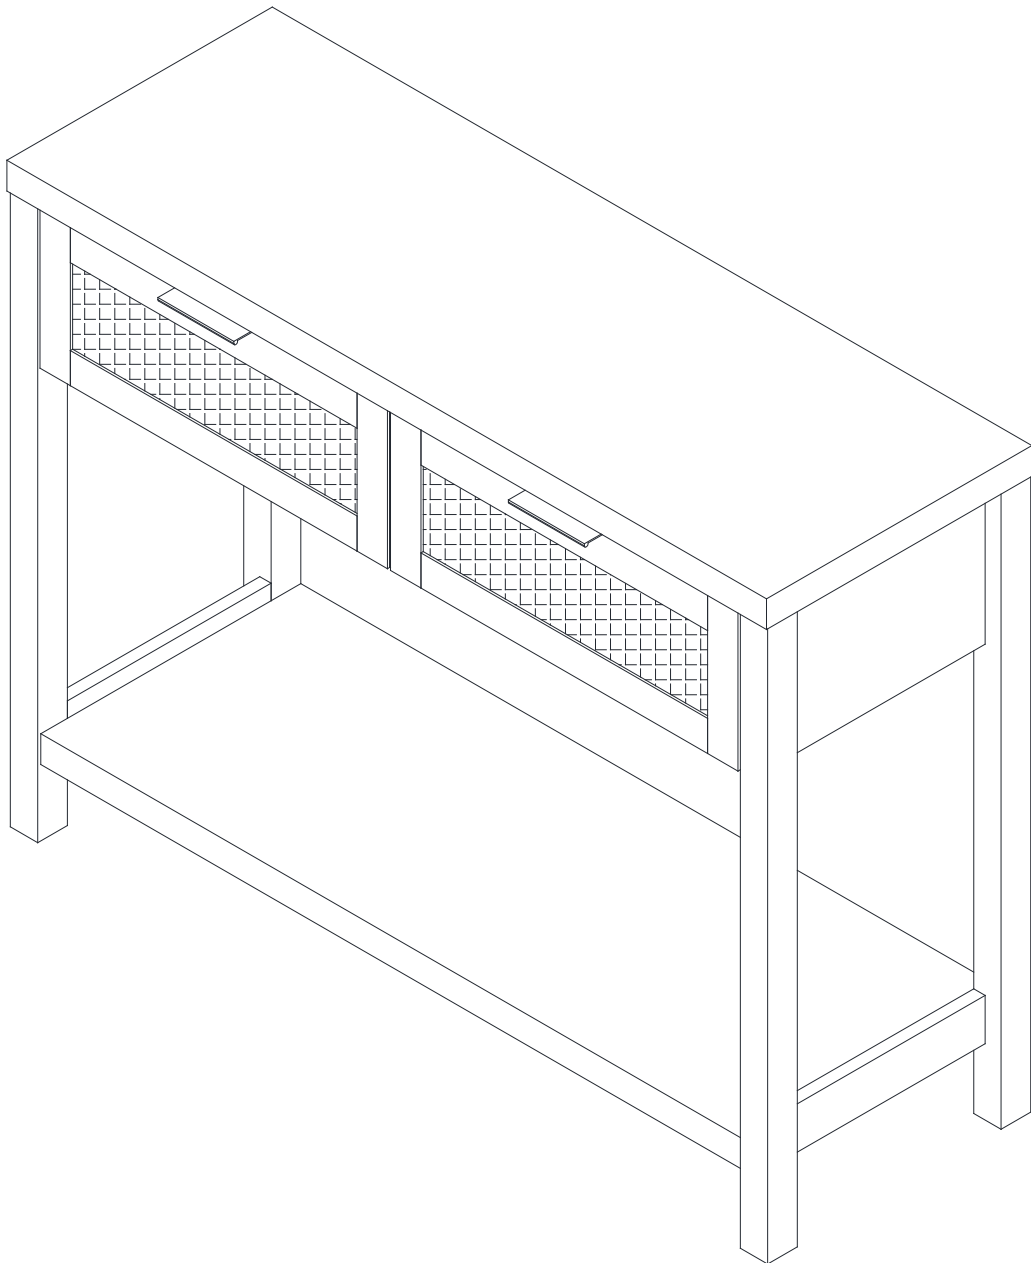

Made In China

Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference. Following these guidelines will ensure a smooth and successful assembly of your product.

1. Part Identification:

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2. Work Surface:

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3. Step-by-Step Assembly:

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

4. Proper Screw Seating:

When attaching screws and nuts, it is essential not to fully tighten them until all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

5. Avoid Over-Tightening:

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

If you encounter any questions or problems during the assembly process, please do not hesitate to contact us. We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.

SICOTAS Customer Help Center:

✉ Service@sicotas.com

🌐 www.sicotas.com

☎ 833-742-6827

Official Website:



WhatsApp:



YouTube:




Ins:








Tik Tok:



Parts List

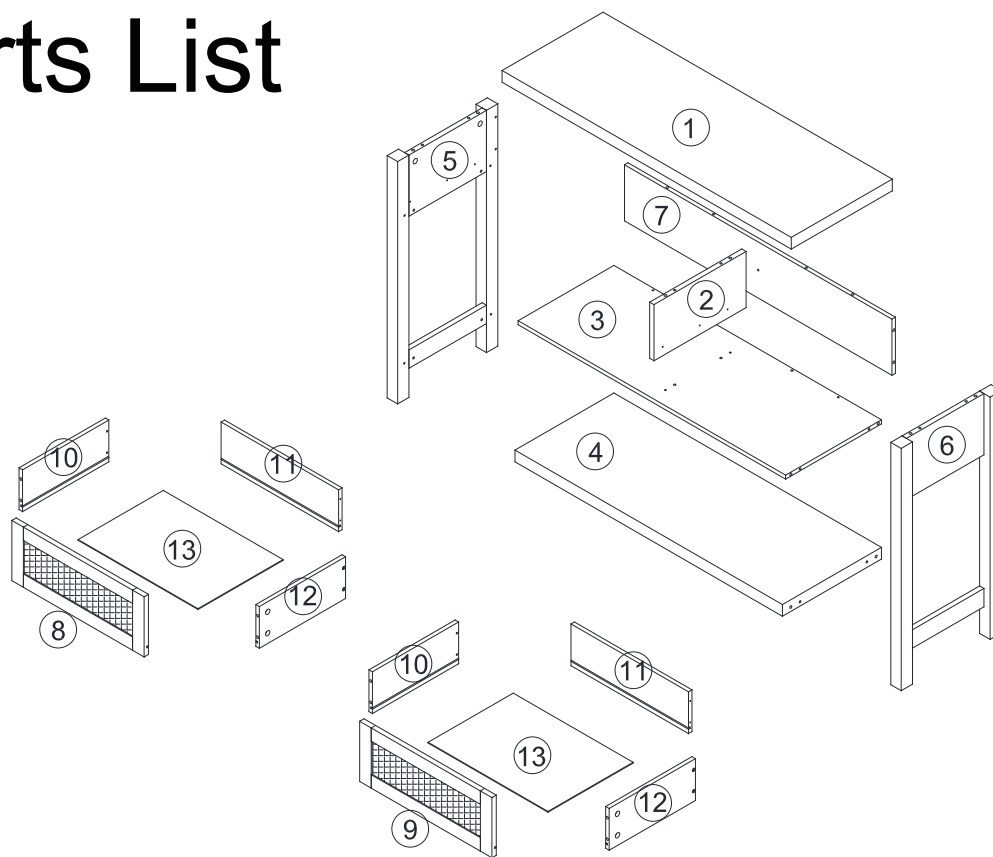


Hardware List

A x28  Ø6x35	B x28  Ø15x12	C x20  Ø6x30	D x 15  Ø8xM4x35	E x28  Ø6.5xM3x12	F x 2 	G x 2  Ø9xM4x12
H x 2 	I x2 	CL x2  300MM	CR x2  300MM	DL x2  300MM	DR x2  300MM	


Code	Description	Quantity
A	Cam bolt	28
B	Cam lock	28
C	Wooden dowel	20
D	M4x35MM Screw	15
E	M3x12MM Screw	28
F	Anti falling iron sheet	2
G	M4x12MM Screw	2

Code	Description	Quantity
H	Plastic anchor	2
I	Handle	2
CL	300mm Drawer runner set	2
CR	300mm Drawer runner set	2
DL	300mm Drawer runner set	2
DR	300mm Drawer runner set	2

Step 1

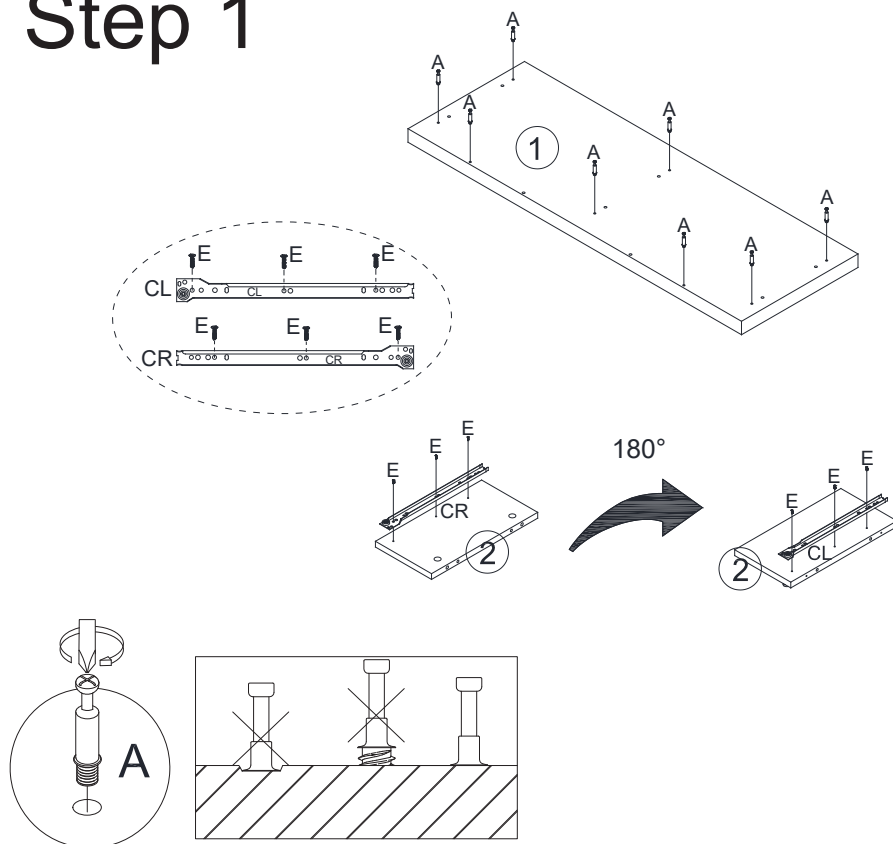


CR  X 1

CL  X 1

E  X 6

A  X 8

Step 2

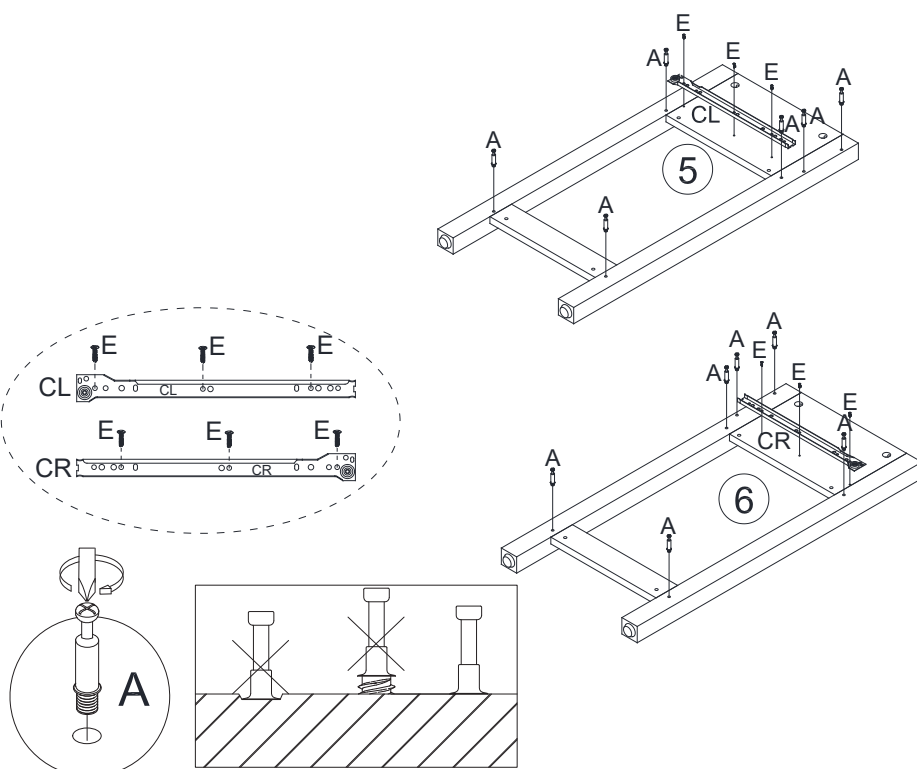


CR  X 1

CL  X 1

E  X 6

A  X 12

Step 3

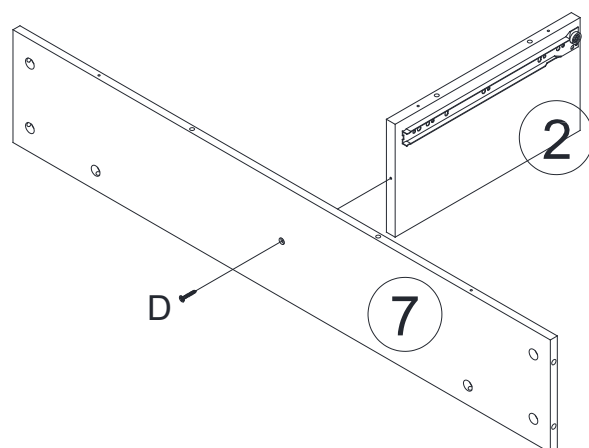


D



X 1

Step 4

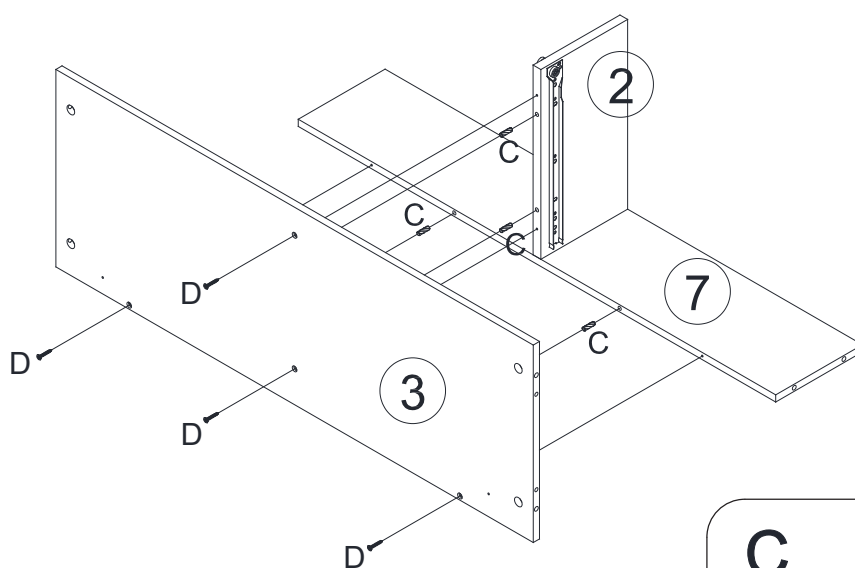

C




X 4


D



X 4




Step 5

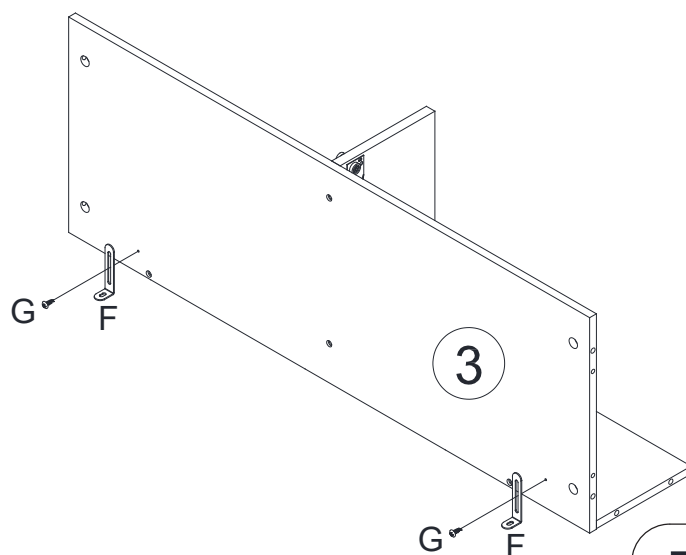

F  X 2

G  X 2




Step 6

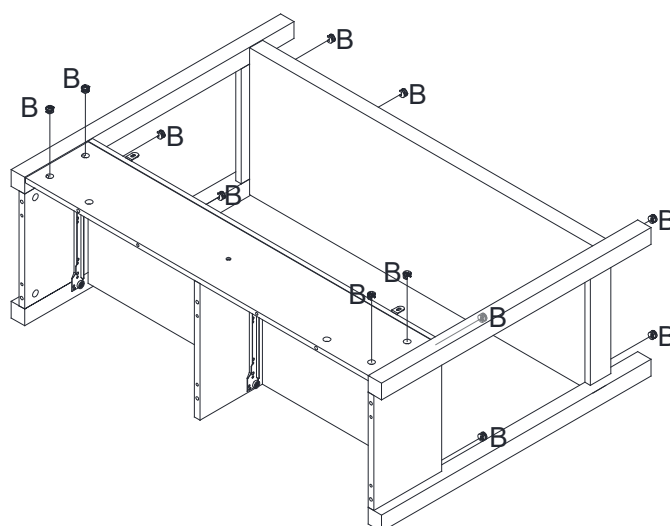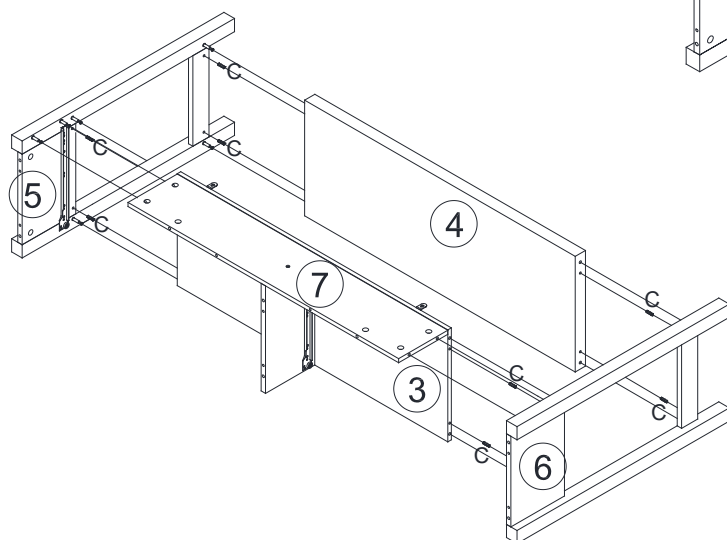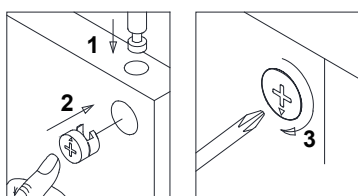

C  X 8

B  X 12




Step 7

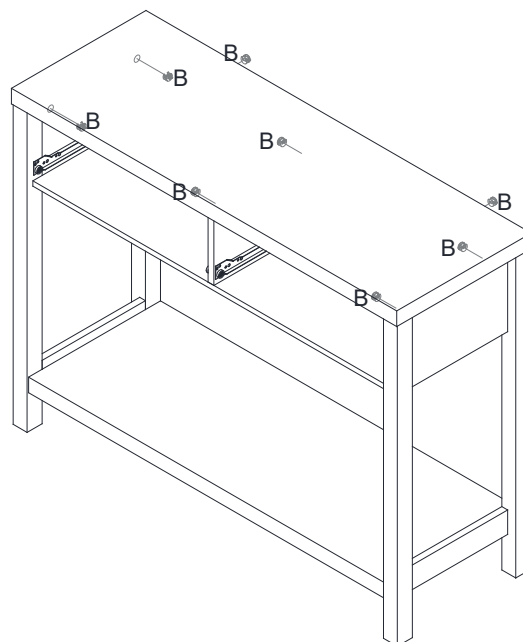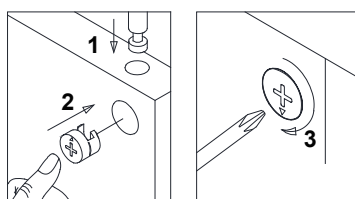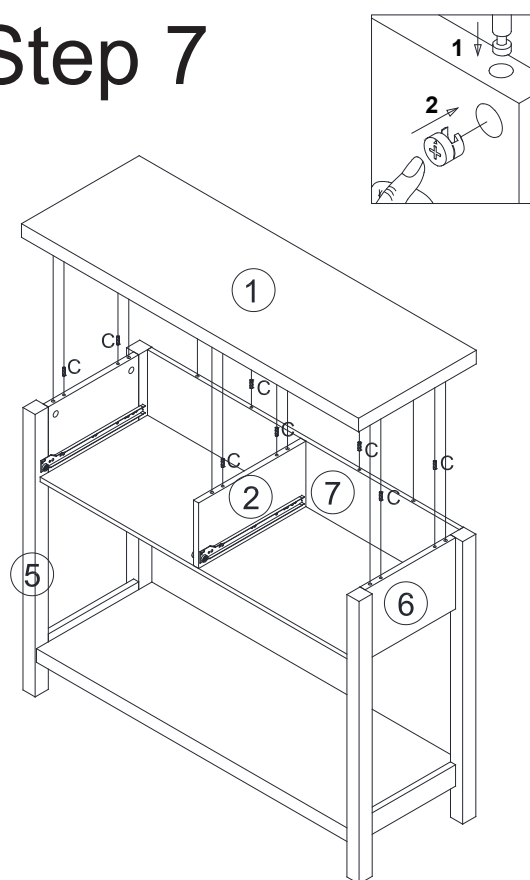



C  X 8

B  X 8

Step 8

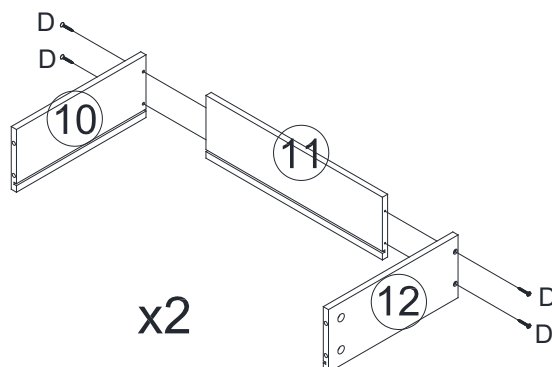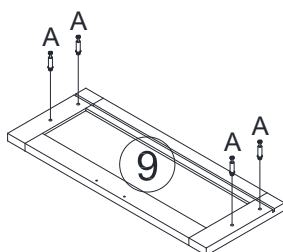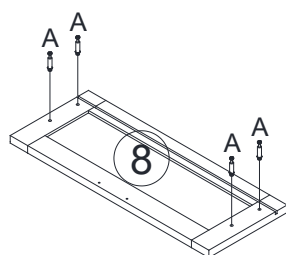


x2

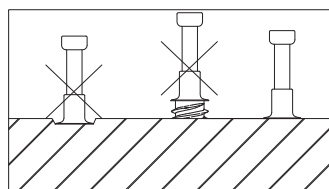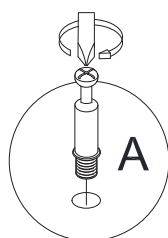


D  X 8

A  X 8


Step 9

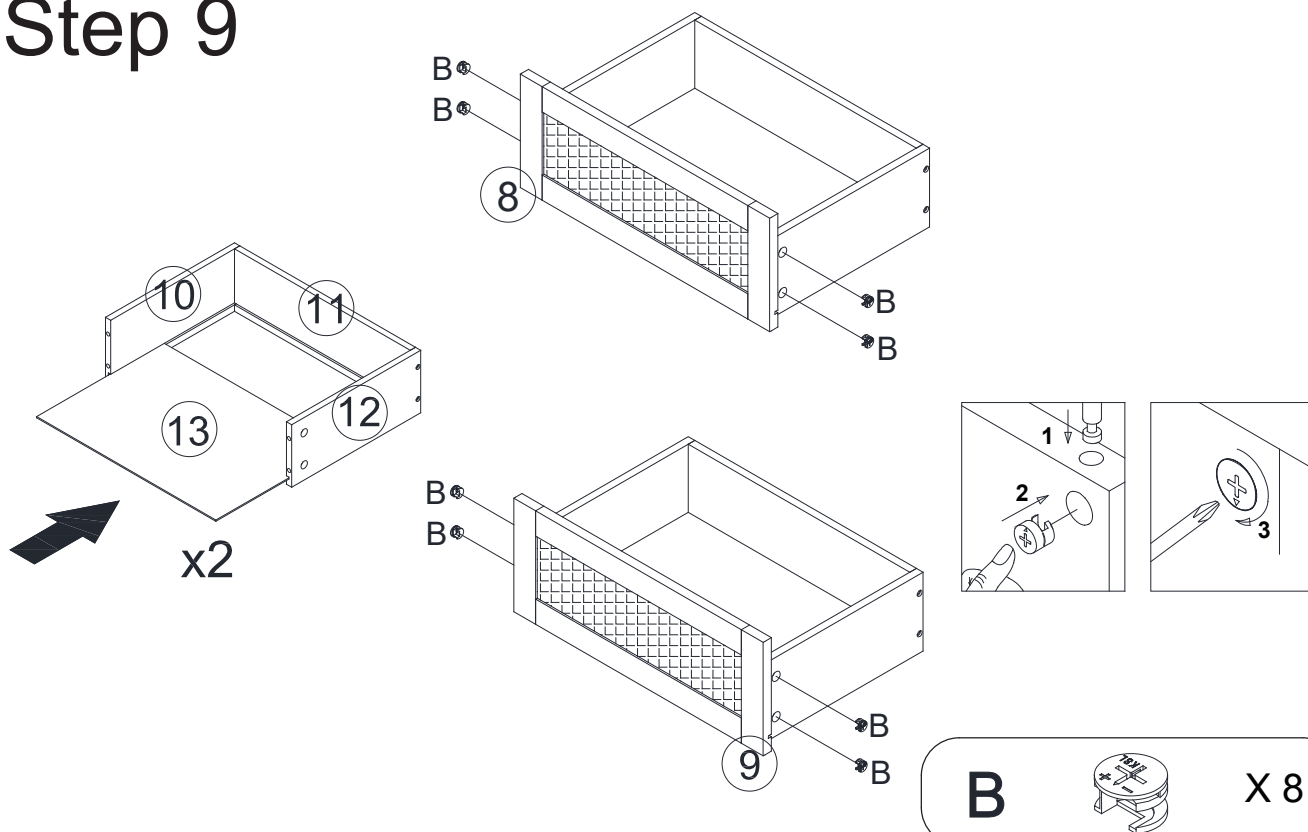


Step 10

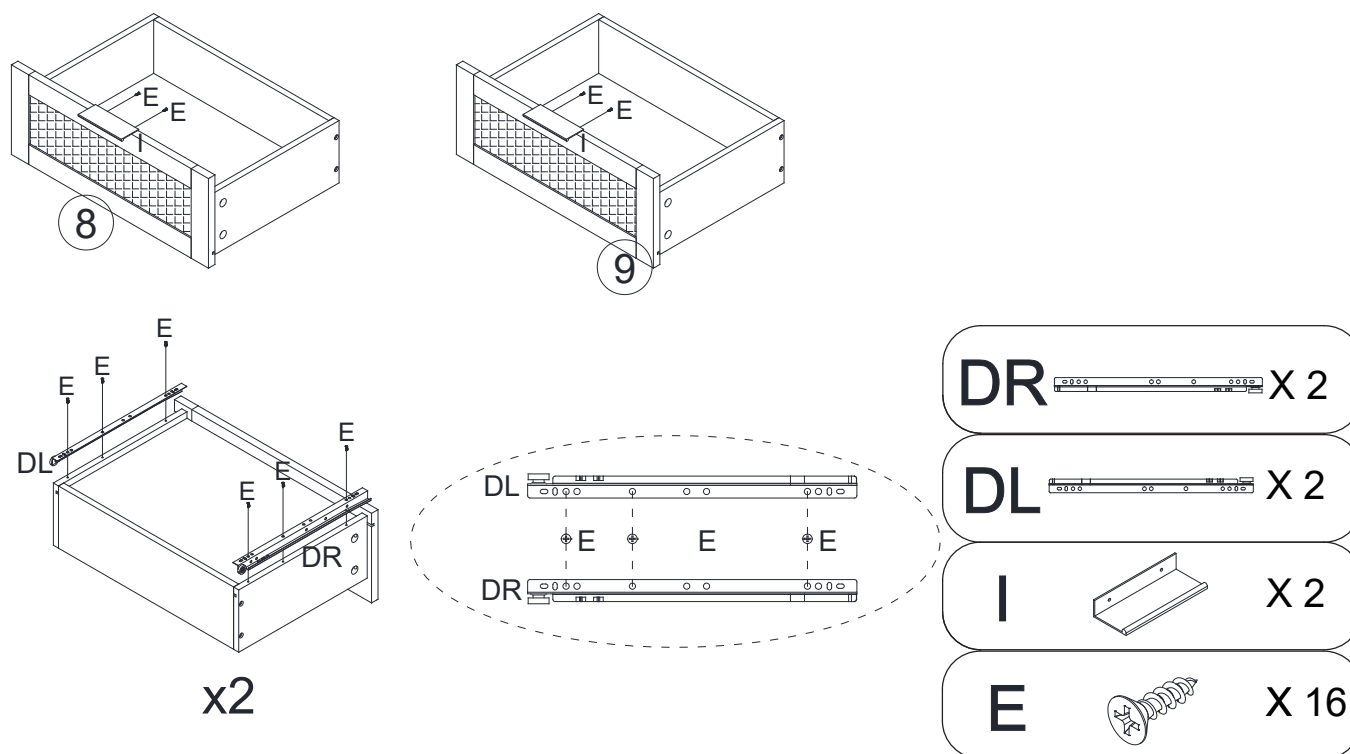


Step 11

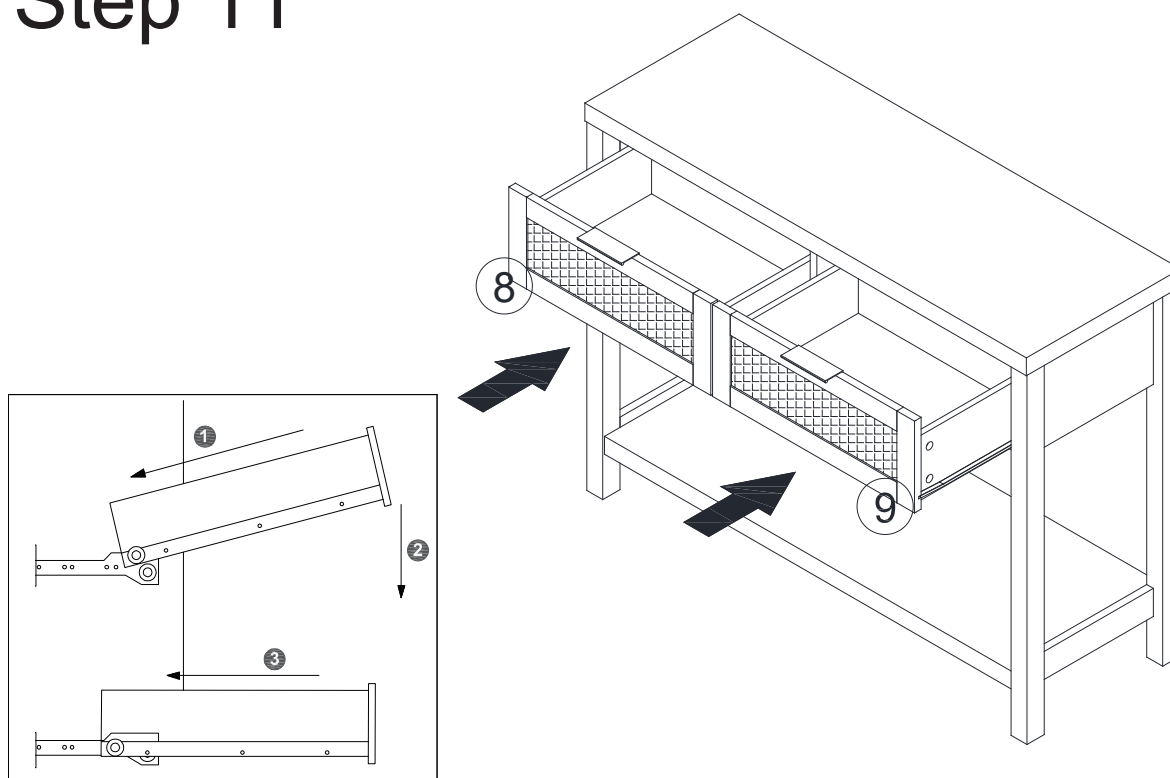


Step 12

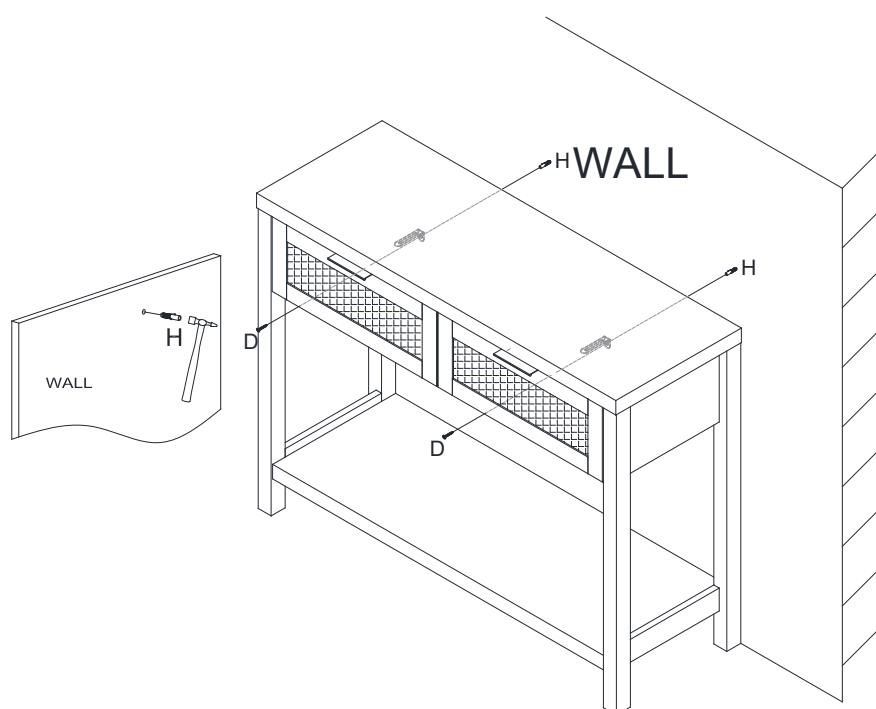

H		X 2
D		X 2

Step 13

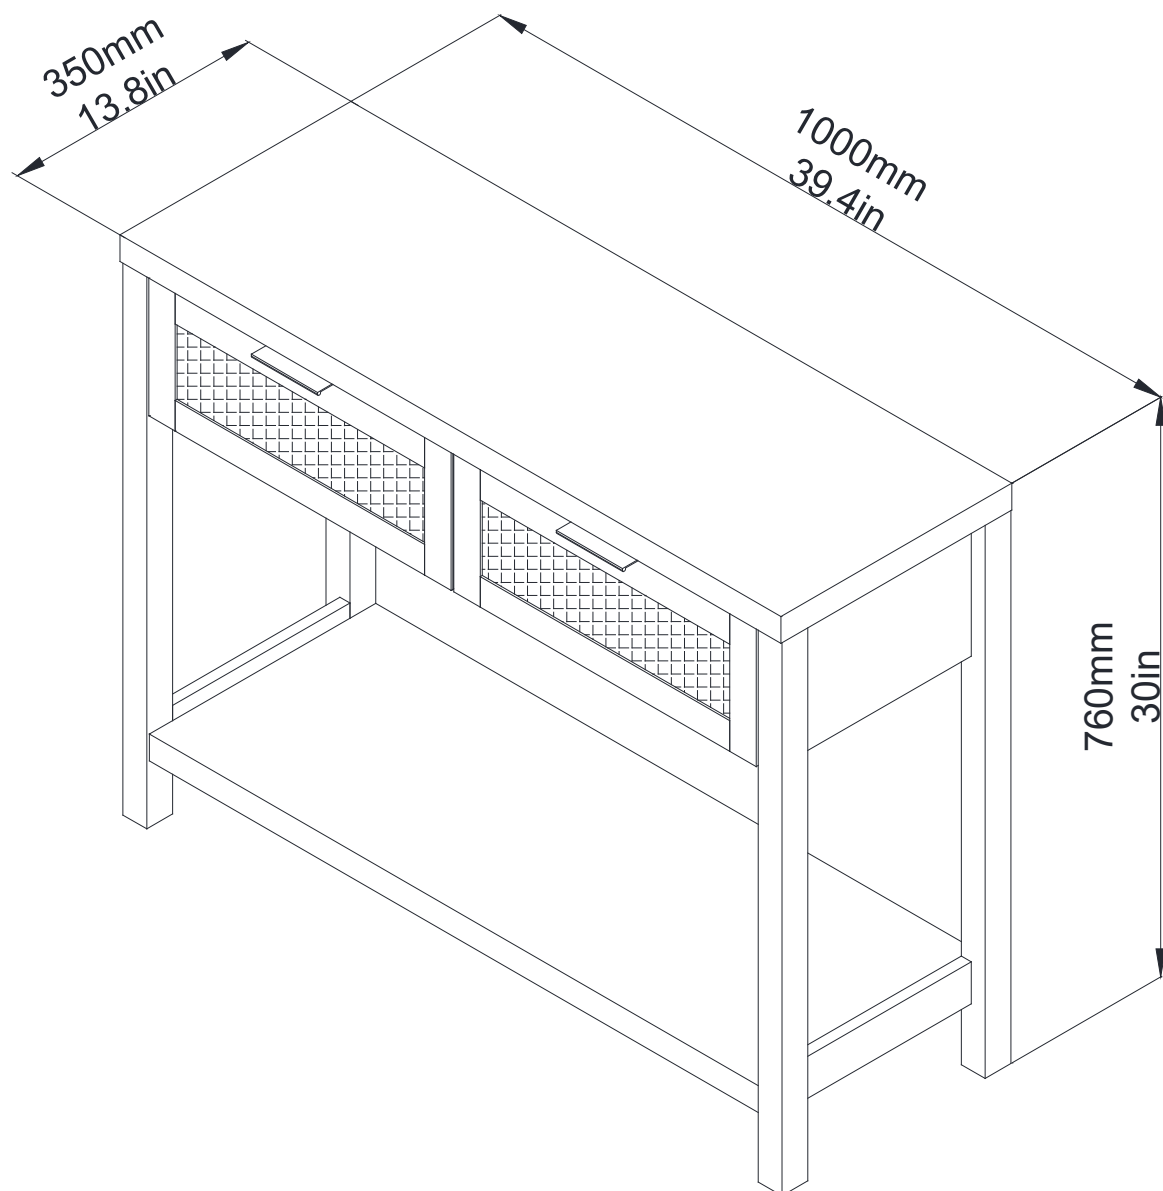

Final assmebly