


SICOTAS

DREWA10003OA
DRO02A1XLTY1129

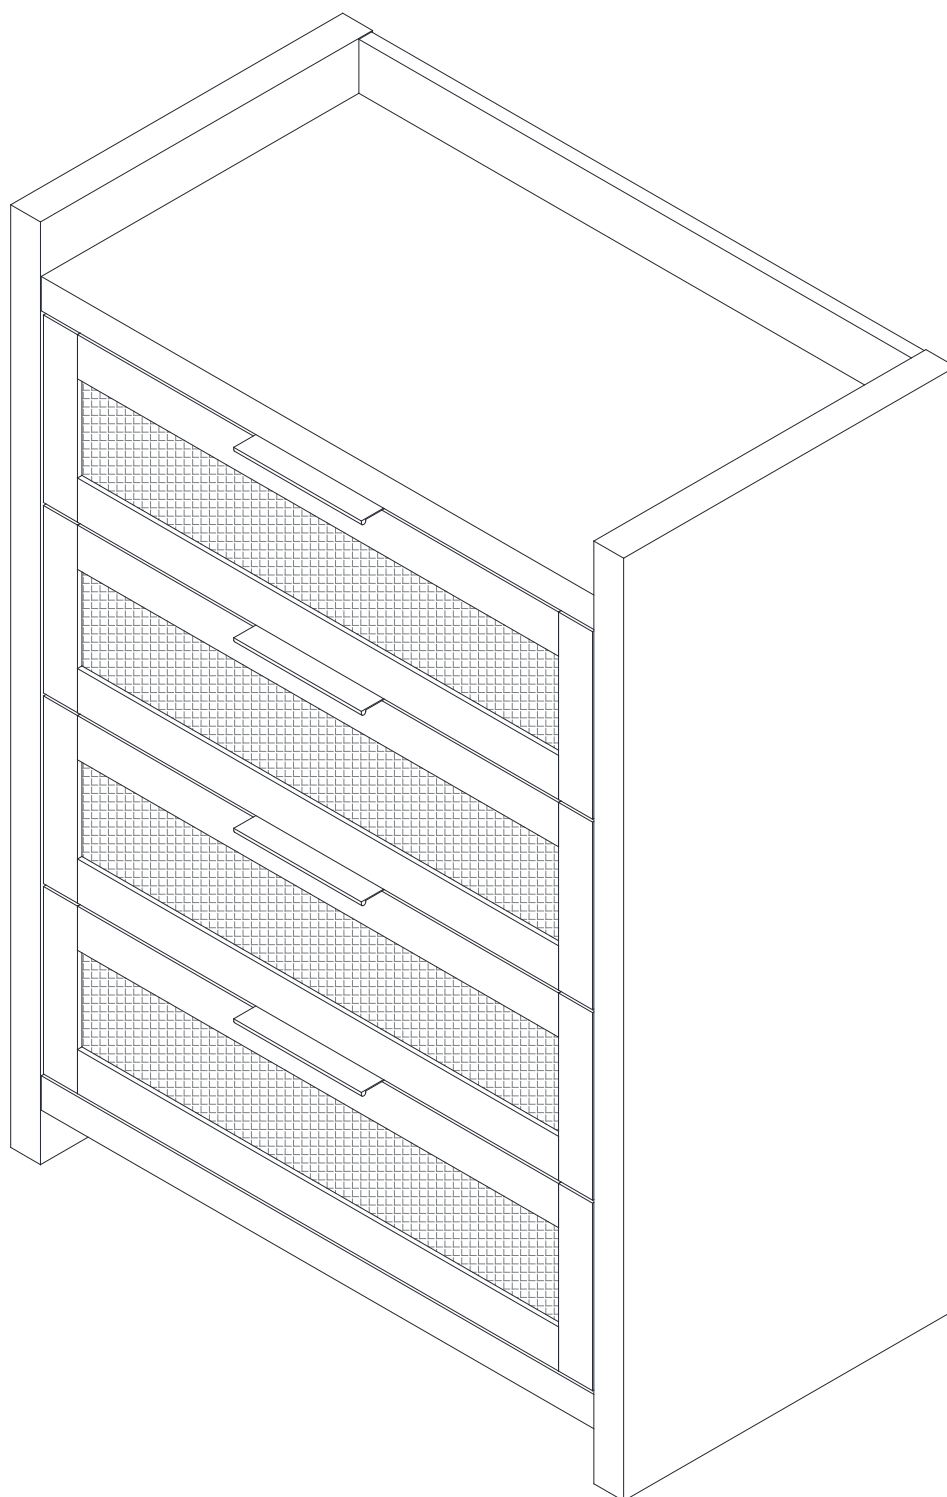

Made In China

Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference. Following these guidelines will ensure a smooth and successful assembly of your product.

1. Part Identification:

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2. Work Surface:

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3. Step-by-Step Assembly:

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

4. Proper Screw Seating:

When attaching screws and nuts, it is essential not to fully tighten them until all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

5. Avoid Over-Tightening:

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

If you encounter any questions or problems during the assembly process, please do not hesitate to contact us. We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.

SICOTAS Customer Help Center:



WhatsApp





Telegram



Parts List

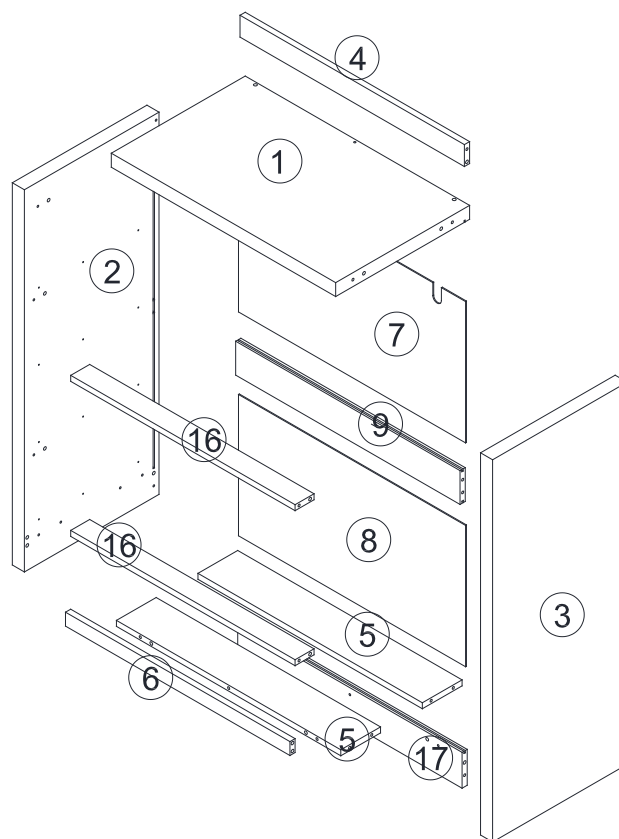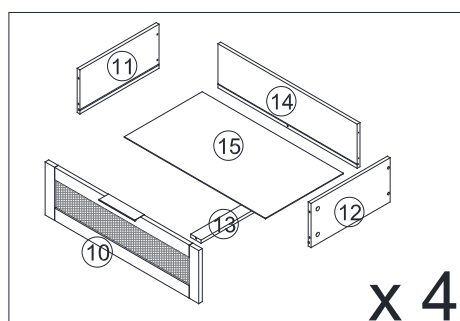



Hardware List

Ax51  M6x35	Bx51  ø15x10	Cx22  ø8x30	Dx22  M4x35	Ex56  M3x12	Fx4 	Gx14  M3x16	Hx2 
Ix2 	Jx2  M4x12	Kx14 	CLx4  350mm	CRx4  350mm	DLx4  350mm	DRx4  350mm	


Code	Description	Quantity
A	M6x35mm Cam bolt	51
B	ø15x10mm Cam lock	51
C	ø8x30mm Wood dowel	22
D	M4x35mm Screw	22
E	M3x12mm Screw	56
F	Handle	4
G	M3x16mm Screw	14
H	Plastic anchor	2

Code	Description	Quantity
I	Anti falling iron sheet	2
J	M4x12mm Screw	2
K	Back clip	14
CL	350mm Drawer runner set	4
CR	350mm Drawer runner set	4
DL	350mm Drawer runner set	4
DR	350mm Drawer runner set	4

Step 1

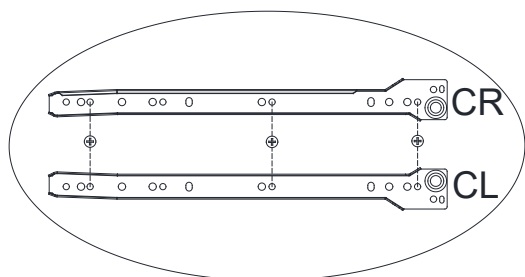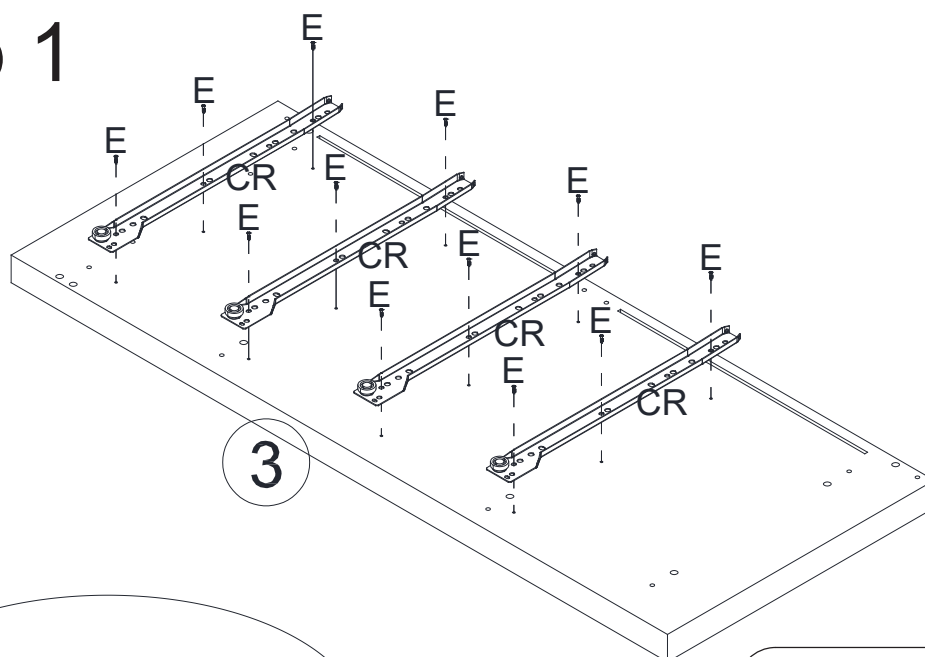

E






X 12

CR



X 4

Step 2

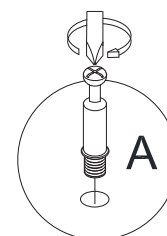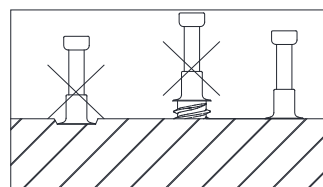
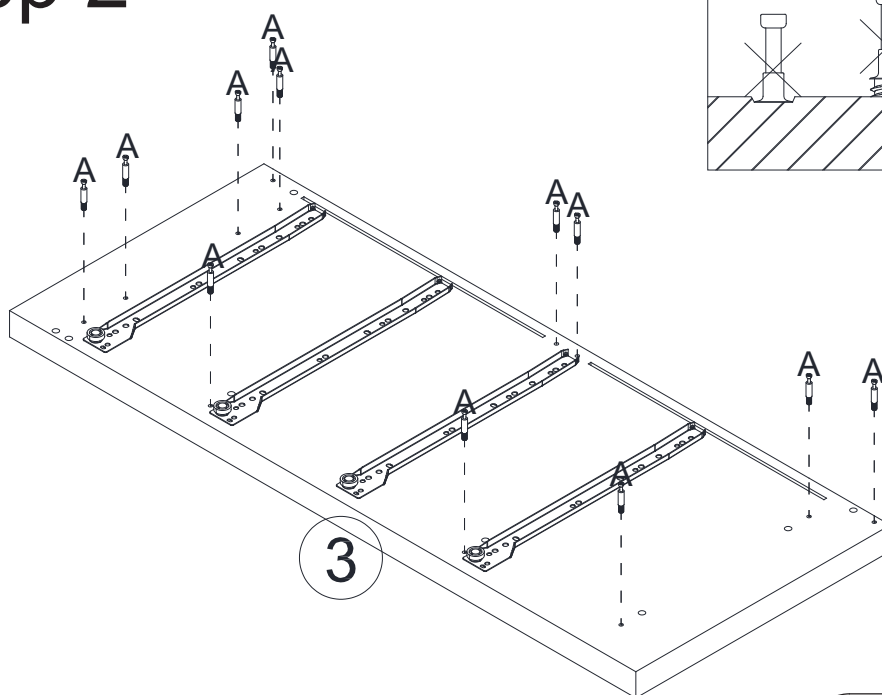


A



X 12




Step 3

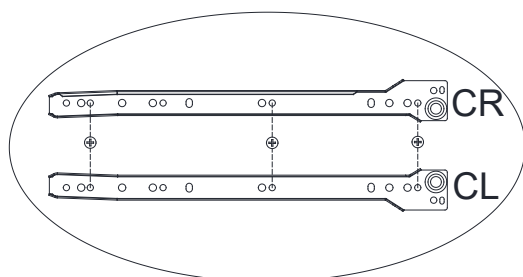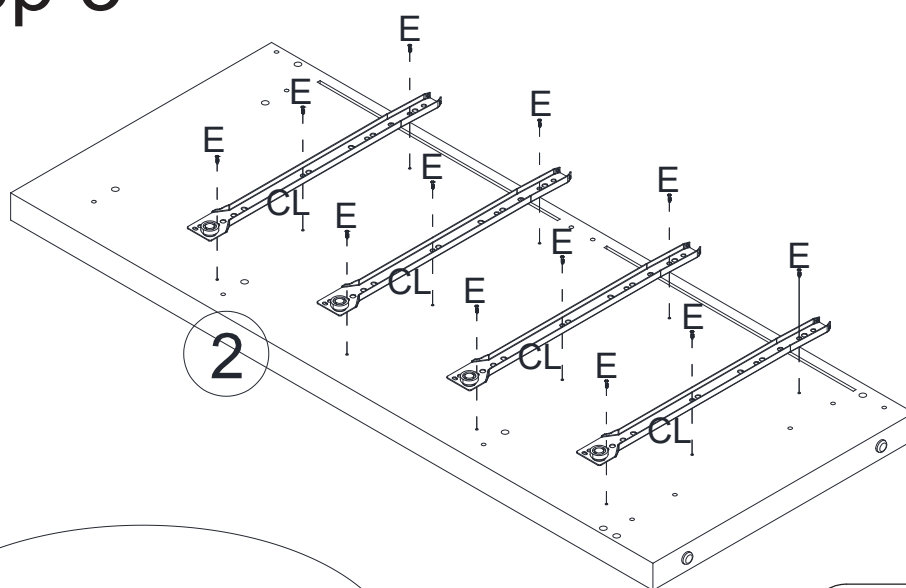


E  X 12


CL  X 4

Step 4

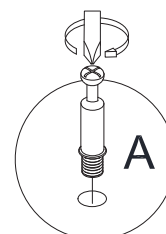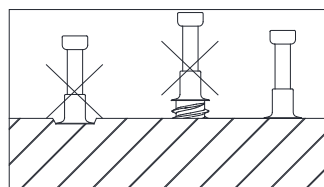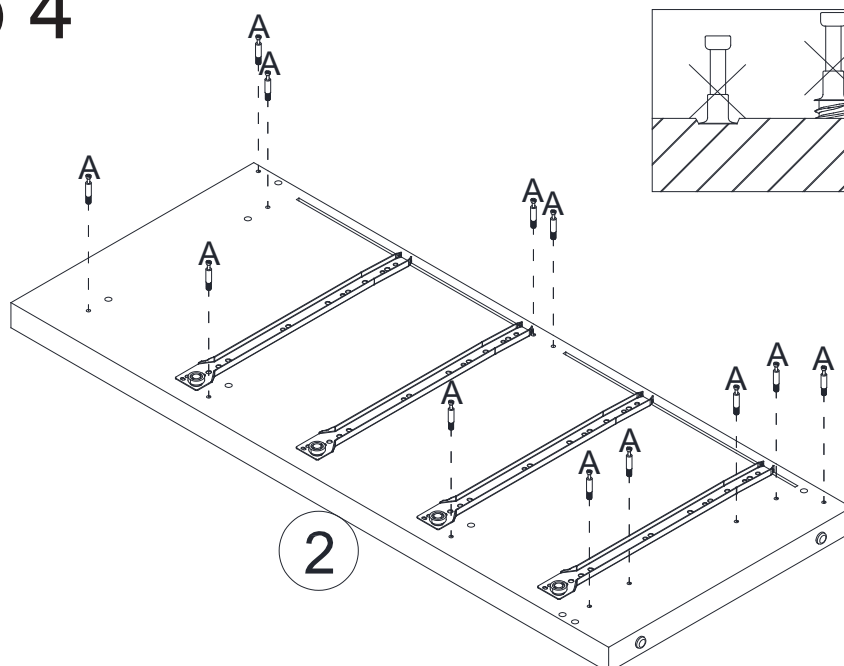


A  X 12

Step 5

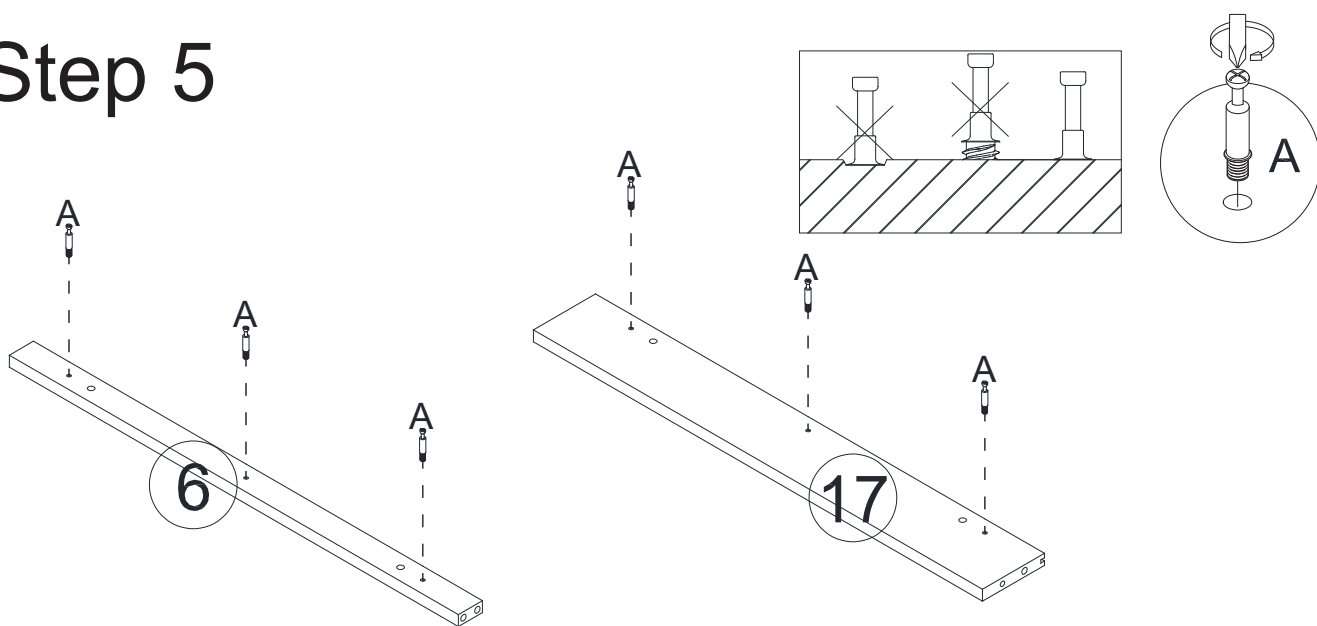


A



X 6

Step 6

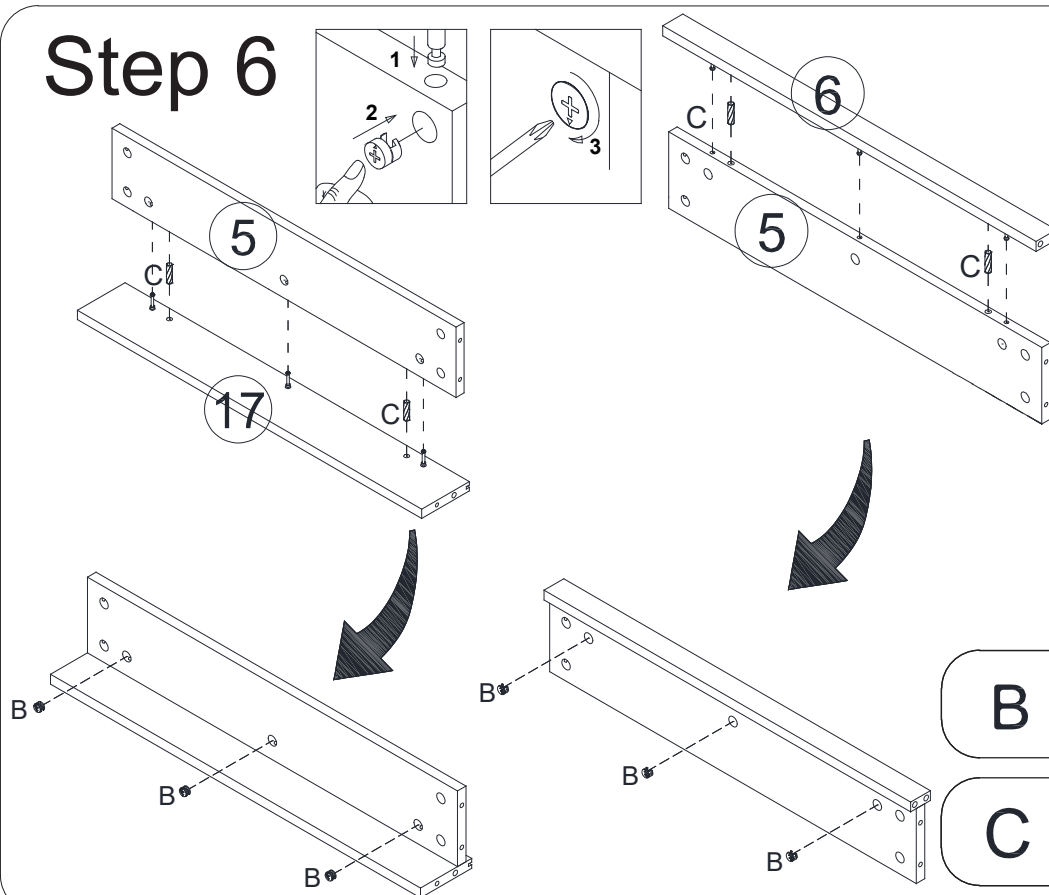


B




X 6


C



X 4



Step 7

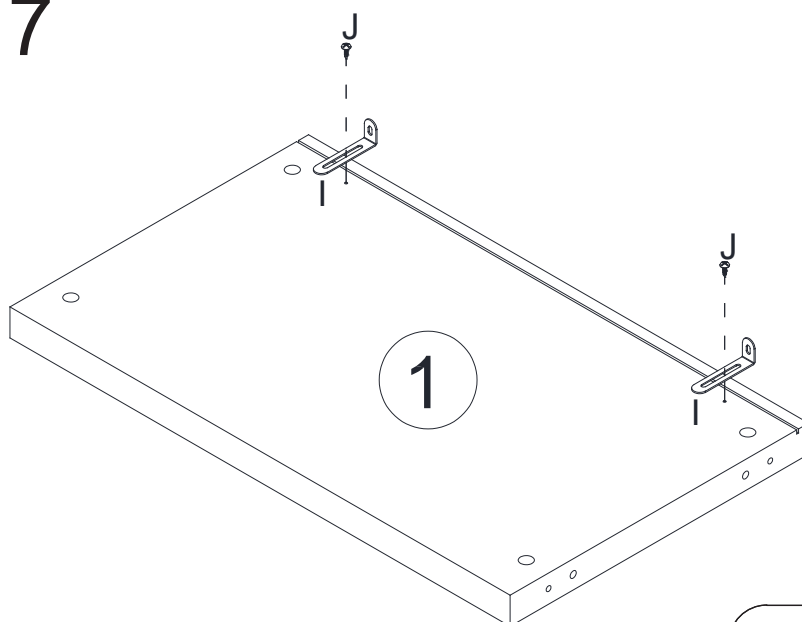


I  X 2

J  X 2

Step 8

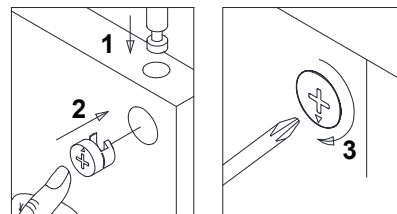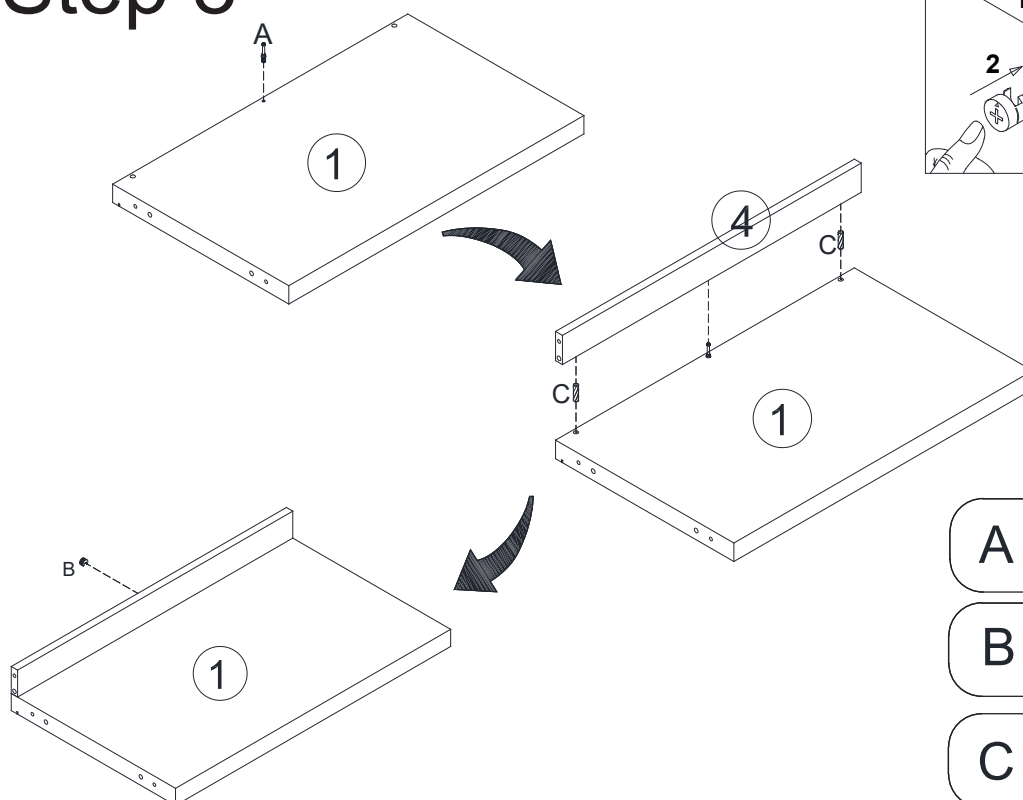


A  X 1


B  X 1

C  X 2


Step 9

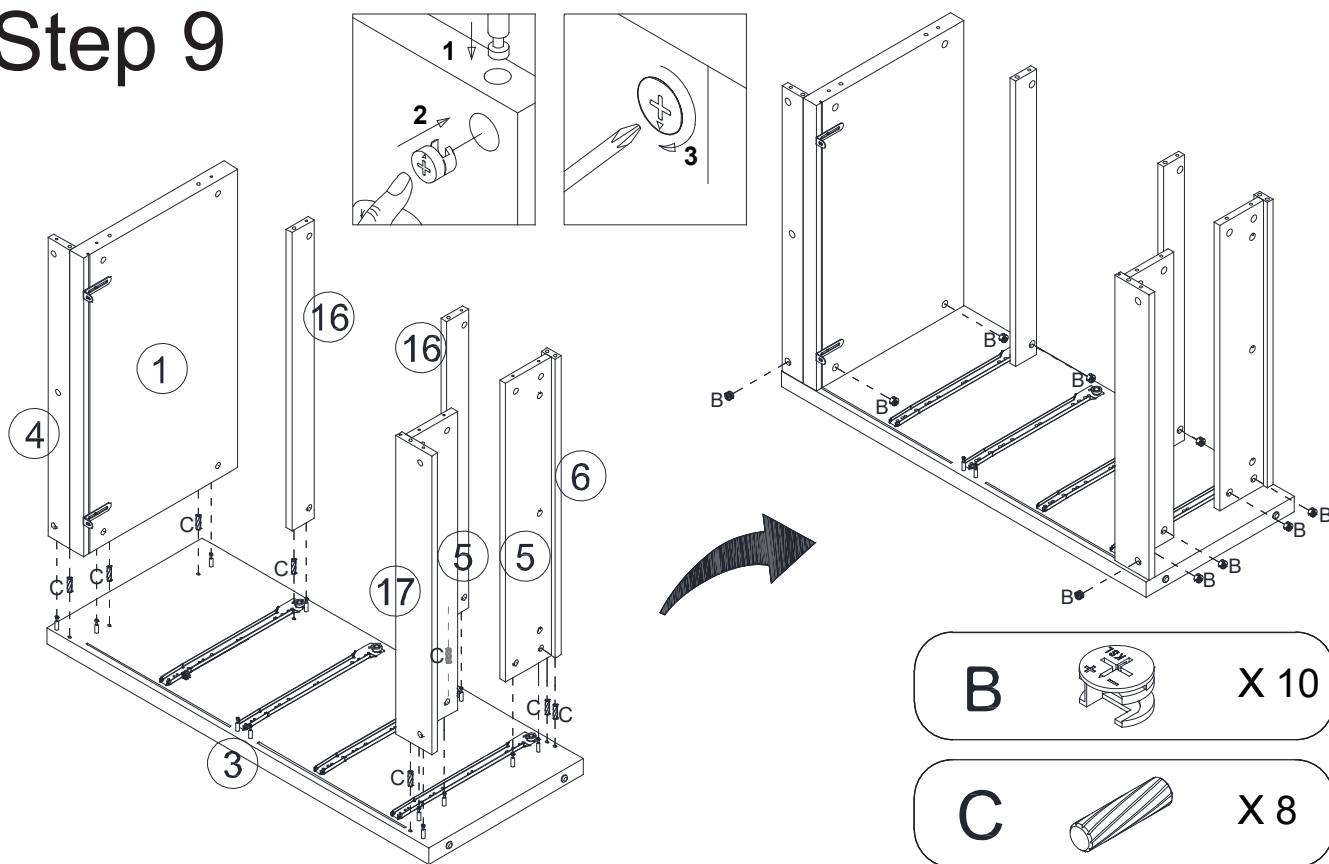

Step 10

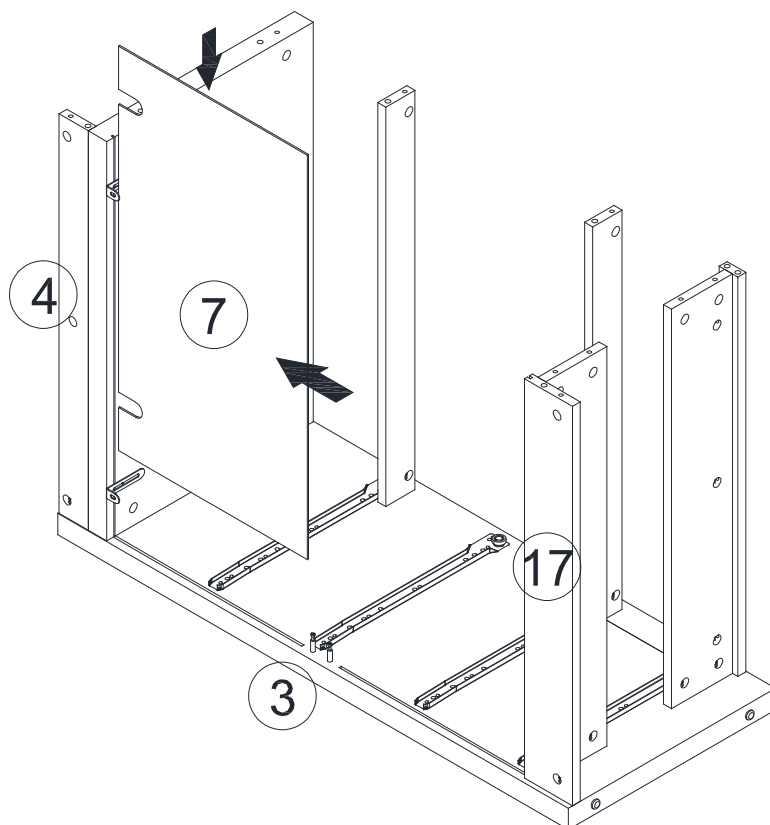

Step 11

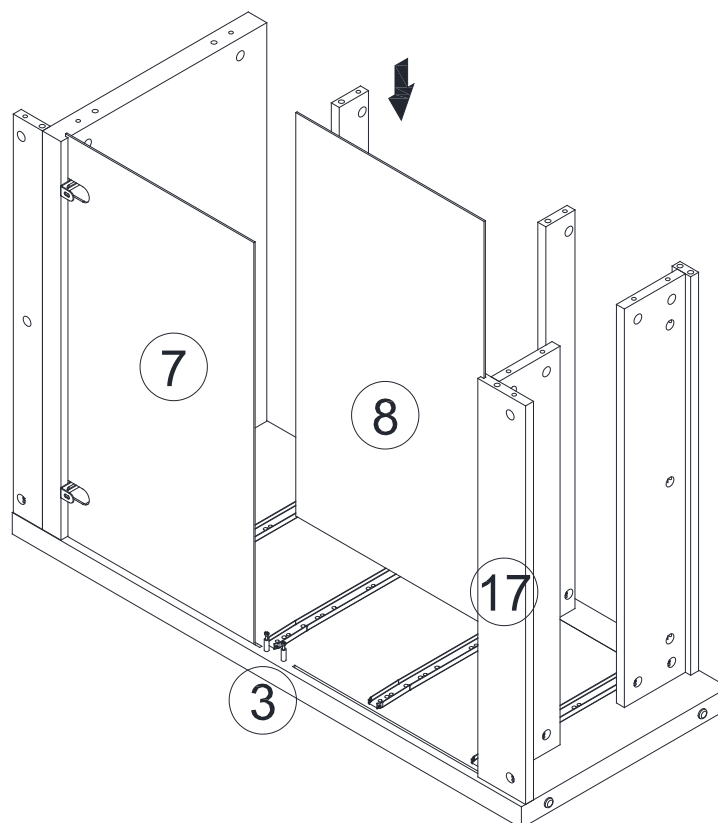


Step 12


B




X2

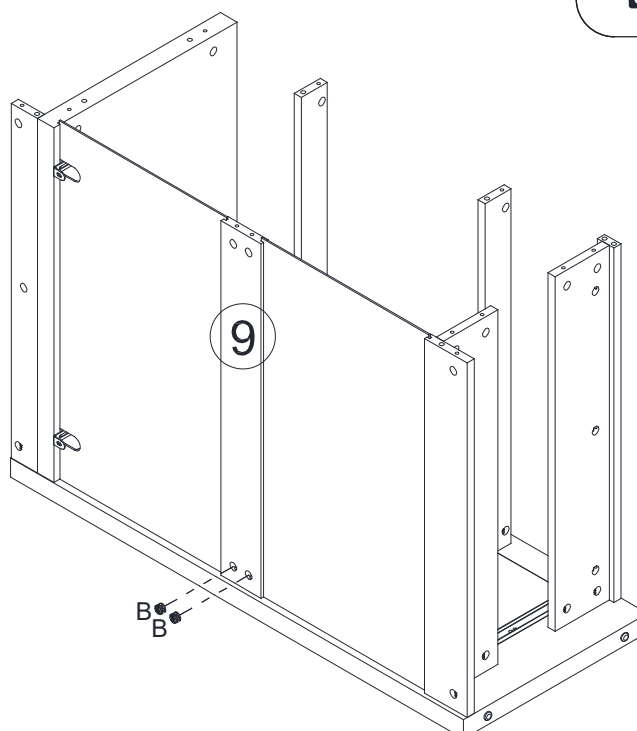

Step 13

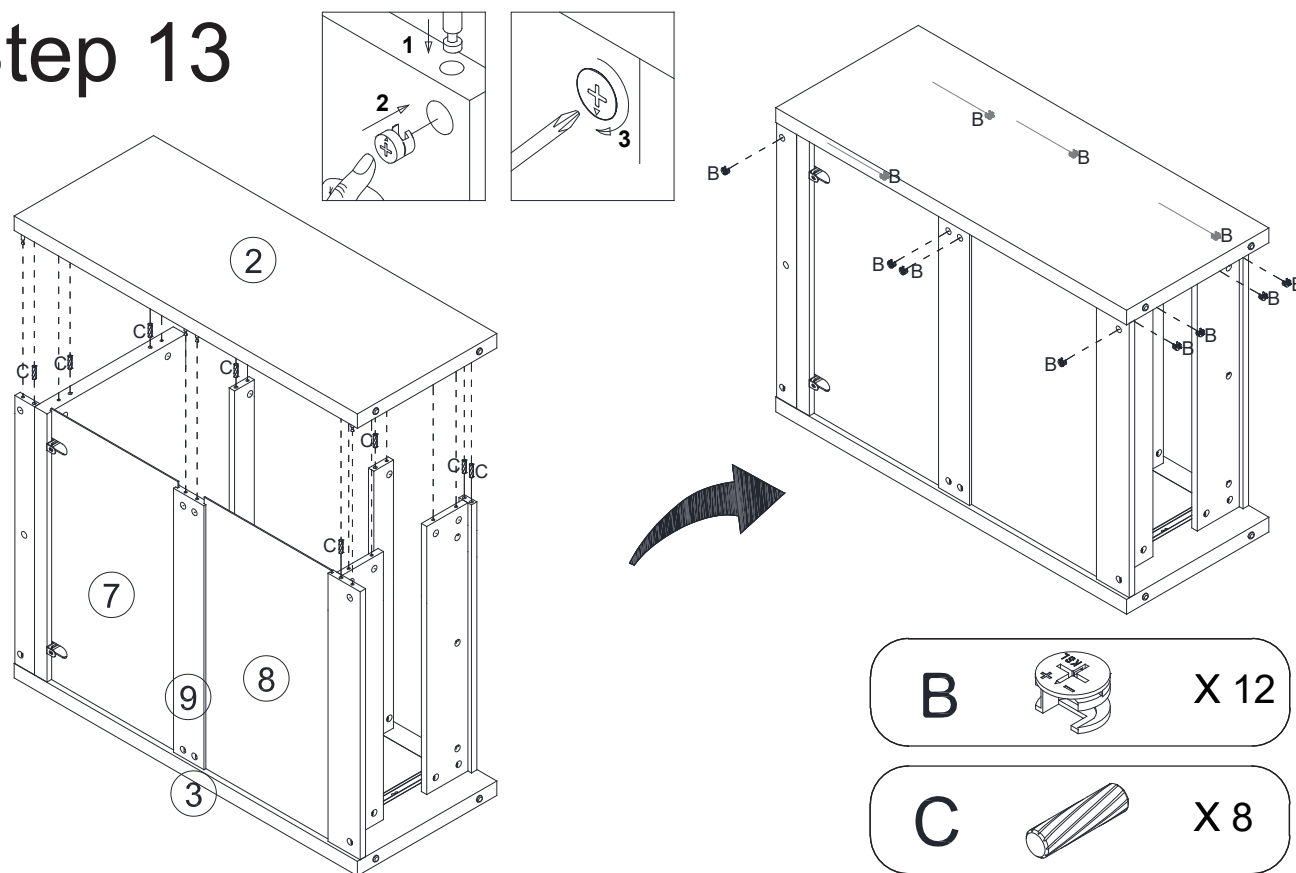

Step 14



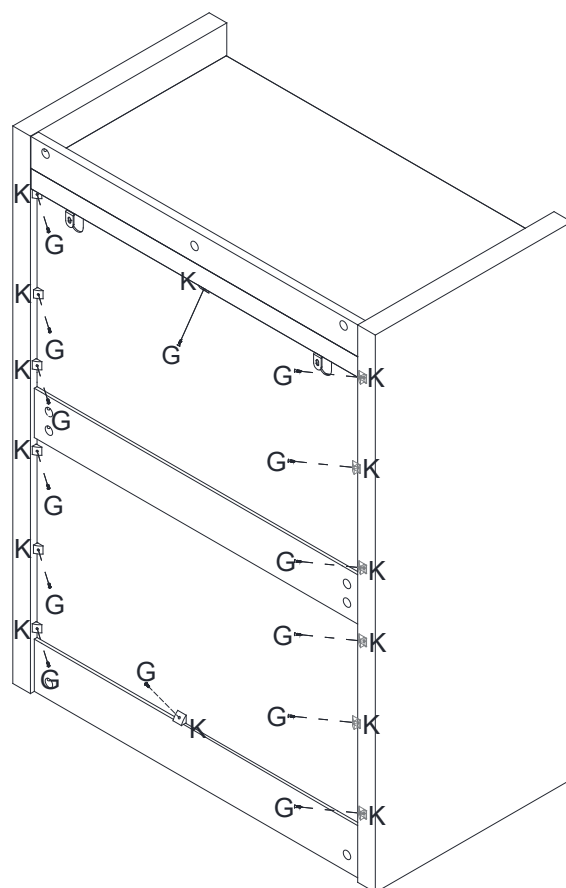


G  **X 14**

K  **X 14**

Step 15

x 4

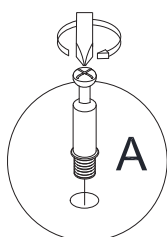
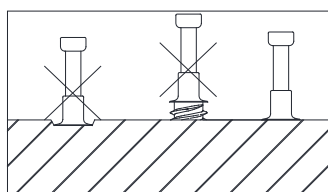
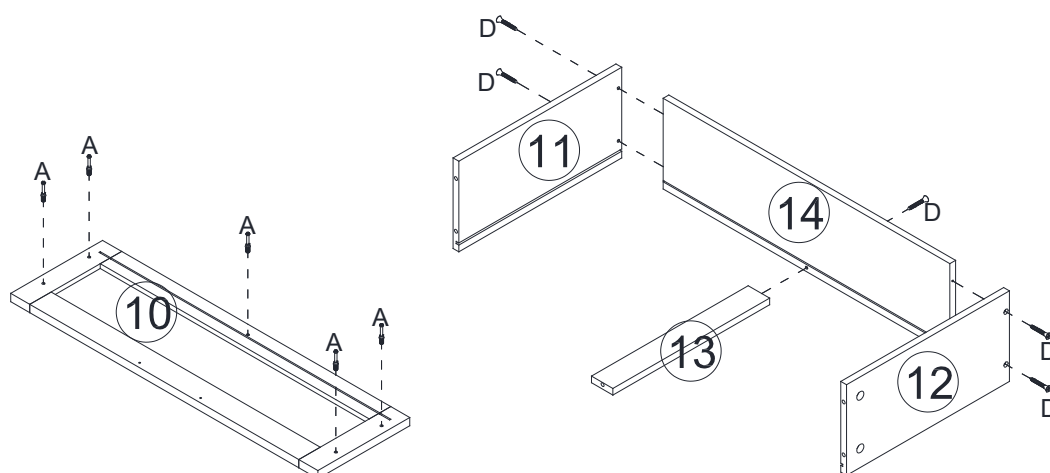


A  X 20

D  X 20

Step 16


x 4

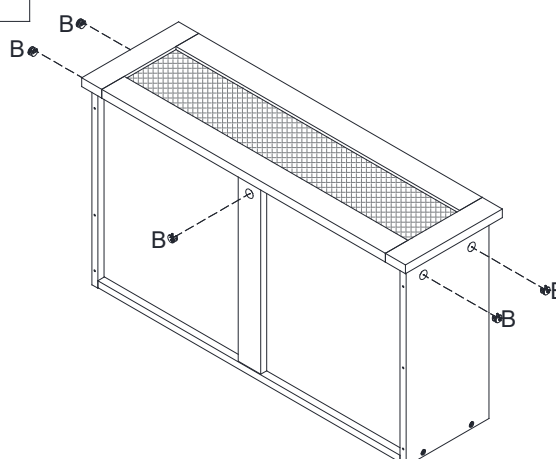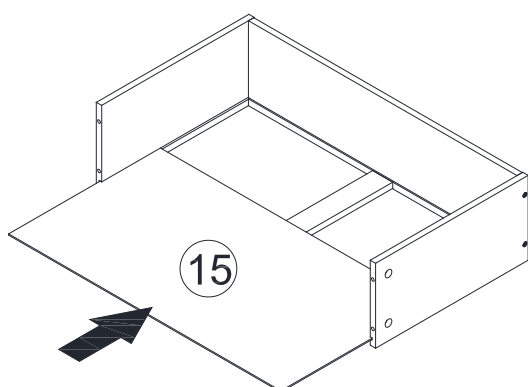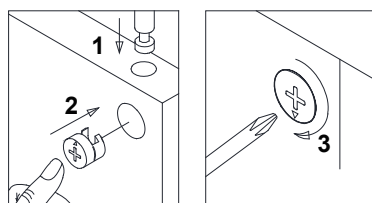


B  X 20

Step 17

x 4

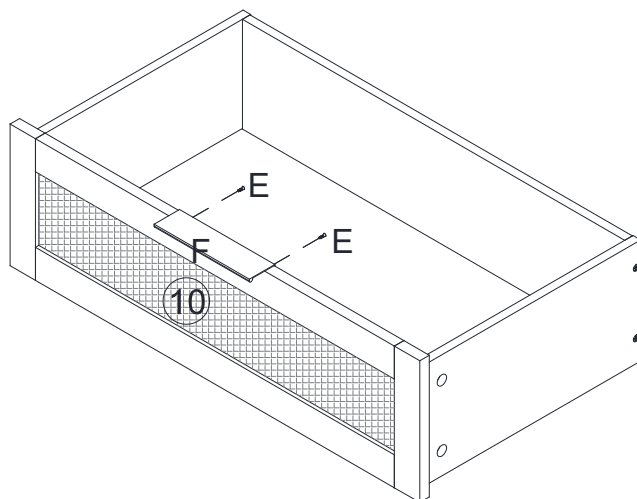


F  X 4

E  X 8

Step 18


x 4

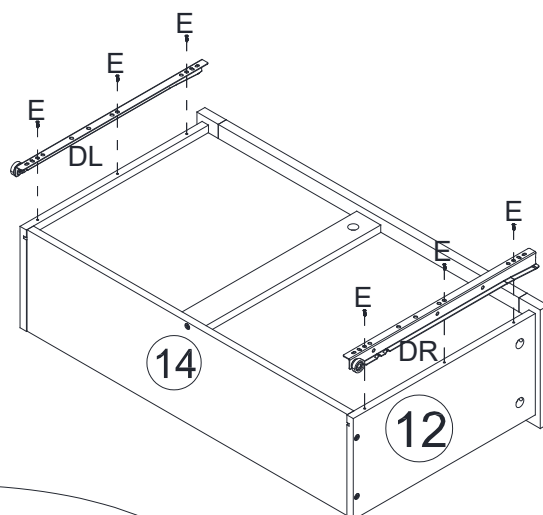

DR  X 4



DL  X 4

E  X 24




Step 19



WALL

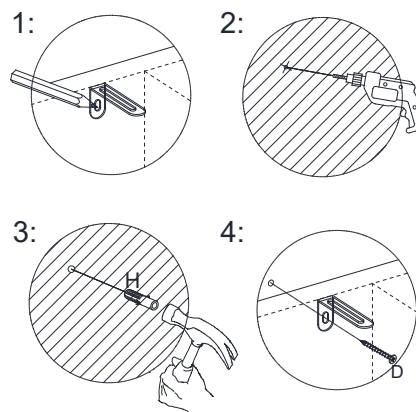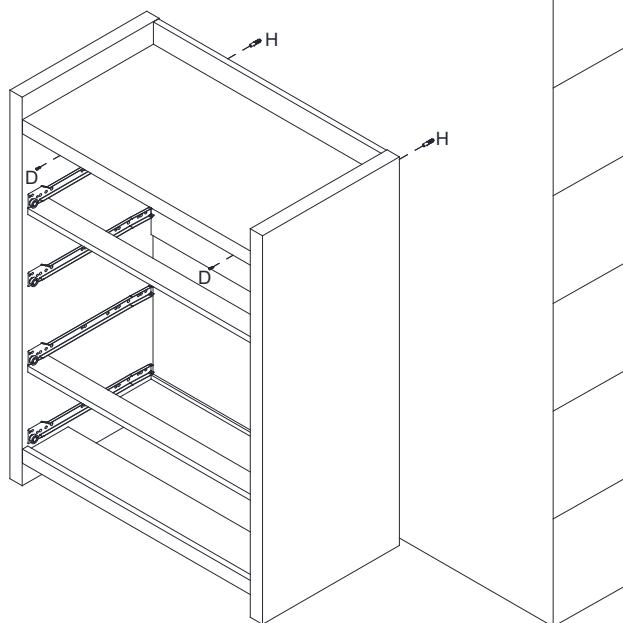

D  X 2

H  X 2

Step 20

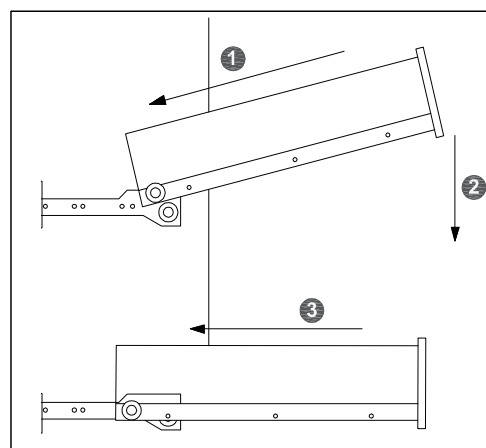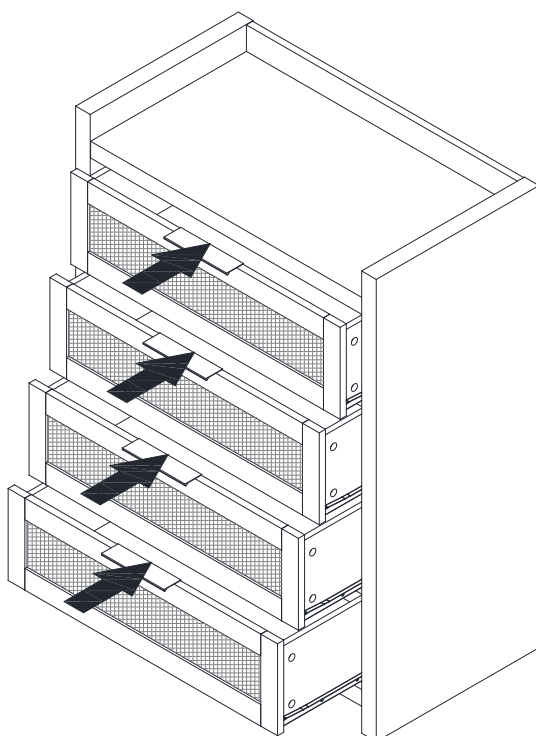

Step 21

